


**GBC.** *Shredmaster®*

**Model:  
2020CC  
Paper  
Shredder**

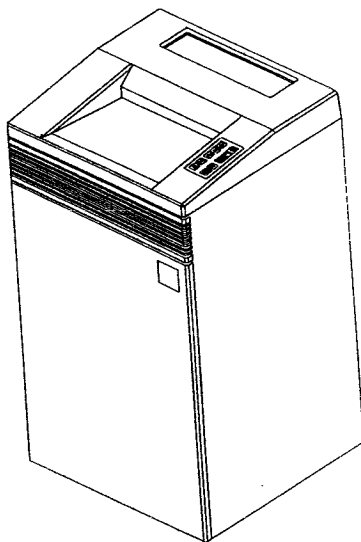


## 2.0 2020CC Specifications

<b>Required Electrical Service:</b>	115V AC $\pm$ 10%, 60 Hz, 15 AMP
<b>Electrical Rating:</b>	115V AC 7A, @ 60Hz, Single Phase
<b>Motor:</b>	¾ Hp, Thermally Protected
<b>Duty Cycle:</b>	Continuous Duty
<b>Dimensions HxWxD:</b>	32.5" x 17.25" x 1.50"
<b>Weight with Cabinet:</b>	93 lbs.
<b>Speed:</b>	18 FPM @ 1 sheet
<b>Shred Size:</b>	1/32" x ½
<b>Throat Width:</b>	10 ¼"
<b>Shredder Capacity:</b>	8 – 10 sheets of 20# Bond Paper*

\*Line voltage will affect results.

### 3.0 2020CC Installation/Operating Procedures

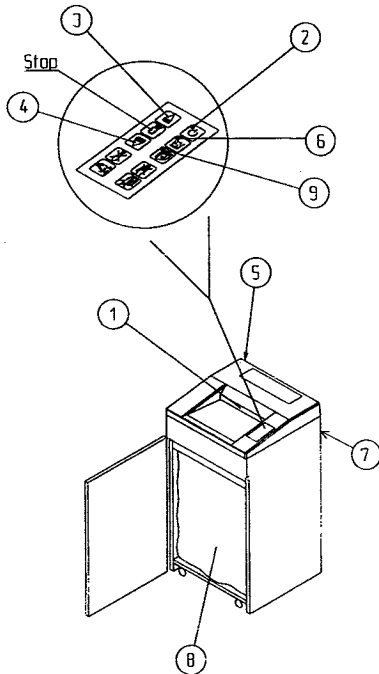

The operating instructions should always be kept accessible and compiled with.

**!** Loose clothing, jewelry and long hair should be kept out of the range of the paper feed. Do not put your hands into the paper feed.

**!** Children should be kept away from the machine. The machine is designed for shredding smooth sheets of papers. Automatic operation with manual feeding of paper.

#### Installation and Connection

This plug-in unit is ready for operation. Remove transport safety device according to attached sheet. Details on the nameplate (5) - Voltage 'V', Frequency 'Hz', Current consumption "A" - must be in accordance with the mains supply.

▲ Connect the machine to power.

▲ Ground wire connection has to be

ensured.

▲ Ensure free access to mains.

**!** Protect mains cable from heat, oil and sharp edges. Do not use the cable to pull the plug out of the outlet.

**!** Do not operate it in damp or wet surroundings. Do not use the machine in vicinity of inflammable liquids or gases.

#### Operation

Set switch (7) on position 'I' @ green LED (2) illuminates. Continuously place paper in the middle of the paper feed (1).

### **3.0 2020CC Installation/Operating Procedures**

When paper jams in the paper feeder (1):

▲If necessary, briefly press the reverse key (4).

▲Remove paper.

▲Feed small amount of paper.

#### **For lengthy stops**

Set switch (7) on position 'O' → green LED (2) goes out.

Indicator (6) illuminates - waste receptacle (8) is full.

- Open door.
- Pull out waste receptacle slightly.
- Press down shredded paper properly into the receptacle.
- Pull out waste receptacle completely and empty.

Door switch indicator (9) illuminates → door is open

- Close the door.

#### **Note:**

- Machine is only ready for operation when the door is closed.
- Regularly check the function of the door switch.
- If the door is opened, the machine must immediately shut down.
- If performance reduces, slightly oil the total length of the paper insert (1).

Fault: Machine is overheated - machine cannot be started. → Automatic thermal protection is active.

Remedy: Wait approx. 1/2 h.

Fault: Machine does not automatically switch off.

Remedy: Clean LED (1) with a brush.

#### **Repair:**

▲Modifications and repairs should only be carried out by authorized personnel.

▲Any mechanical or electrical modification resp. repair of the machine which does not correspond to the valid directions can call for a considerable risk of accidents.

▲Turn off the mains before opening the housing,

▲Defective mains cables should be replaced immediately.