


# GBC4250 Laminator

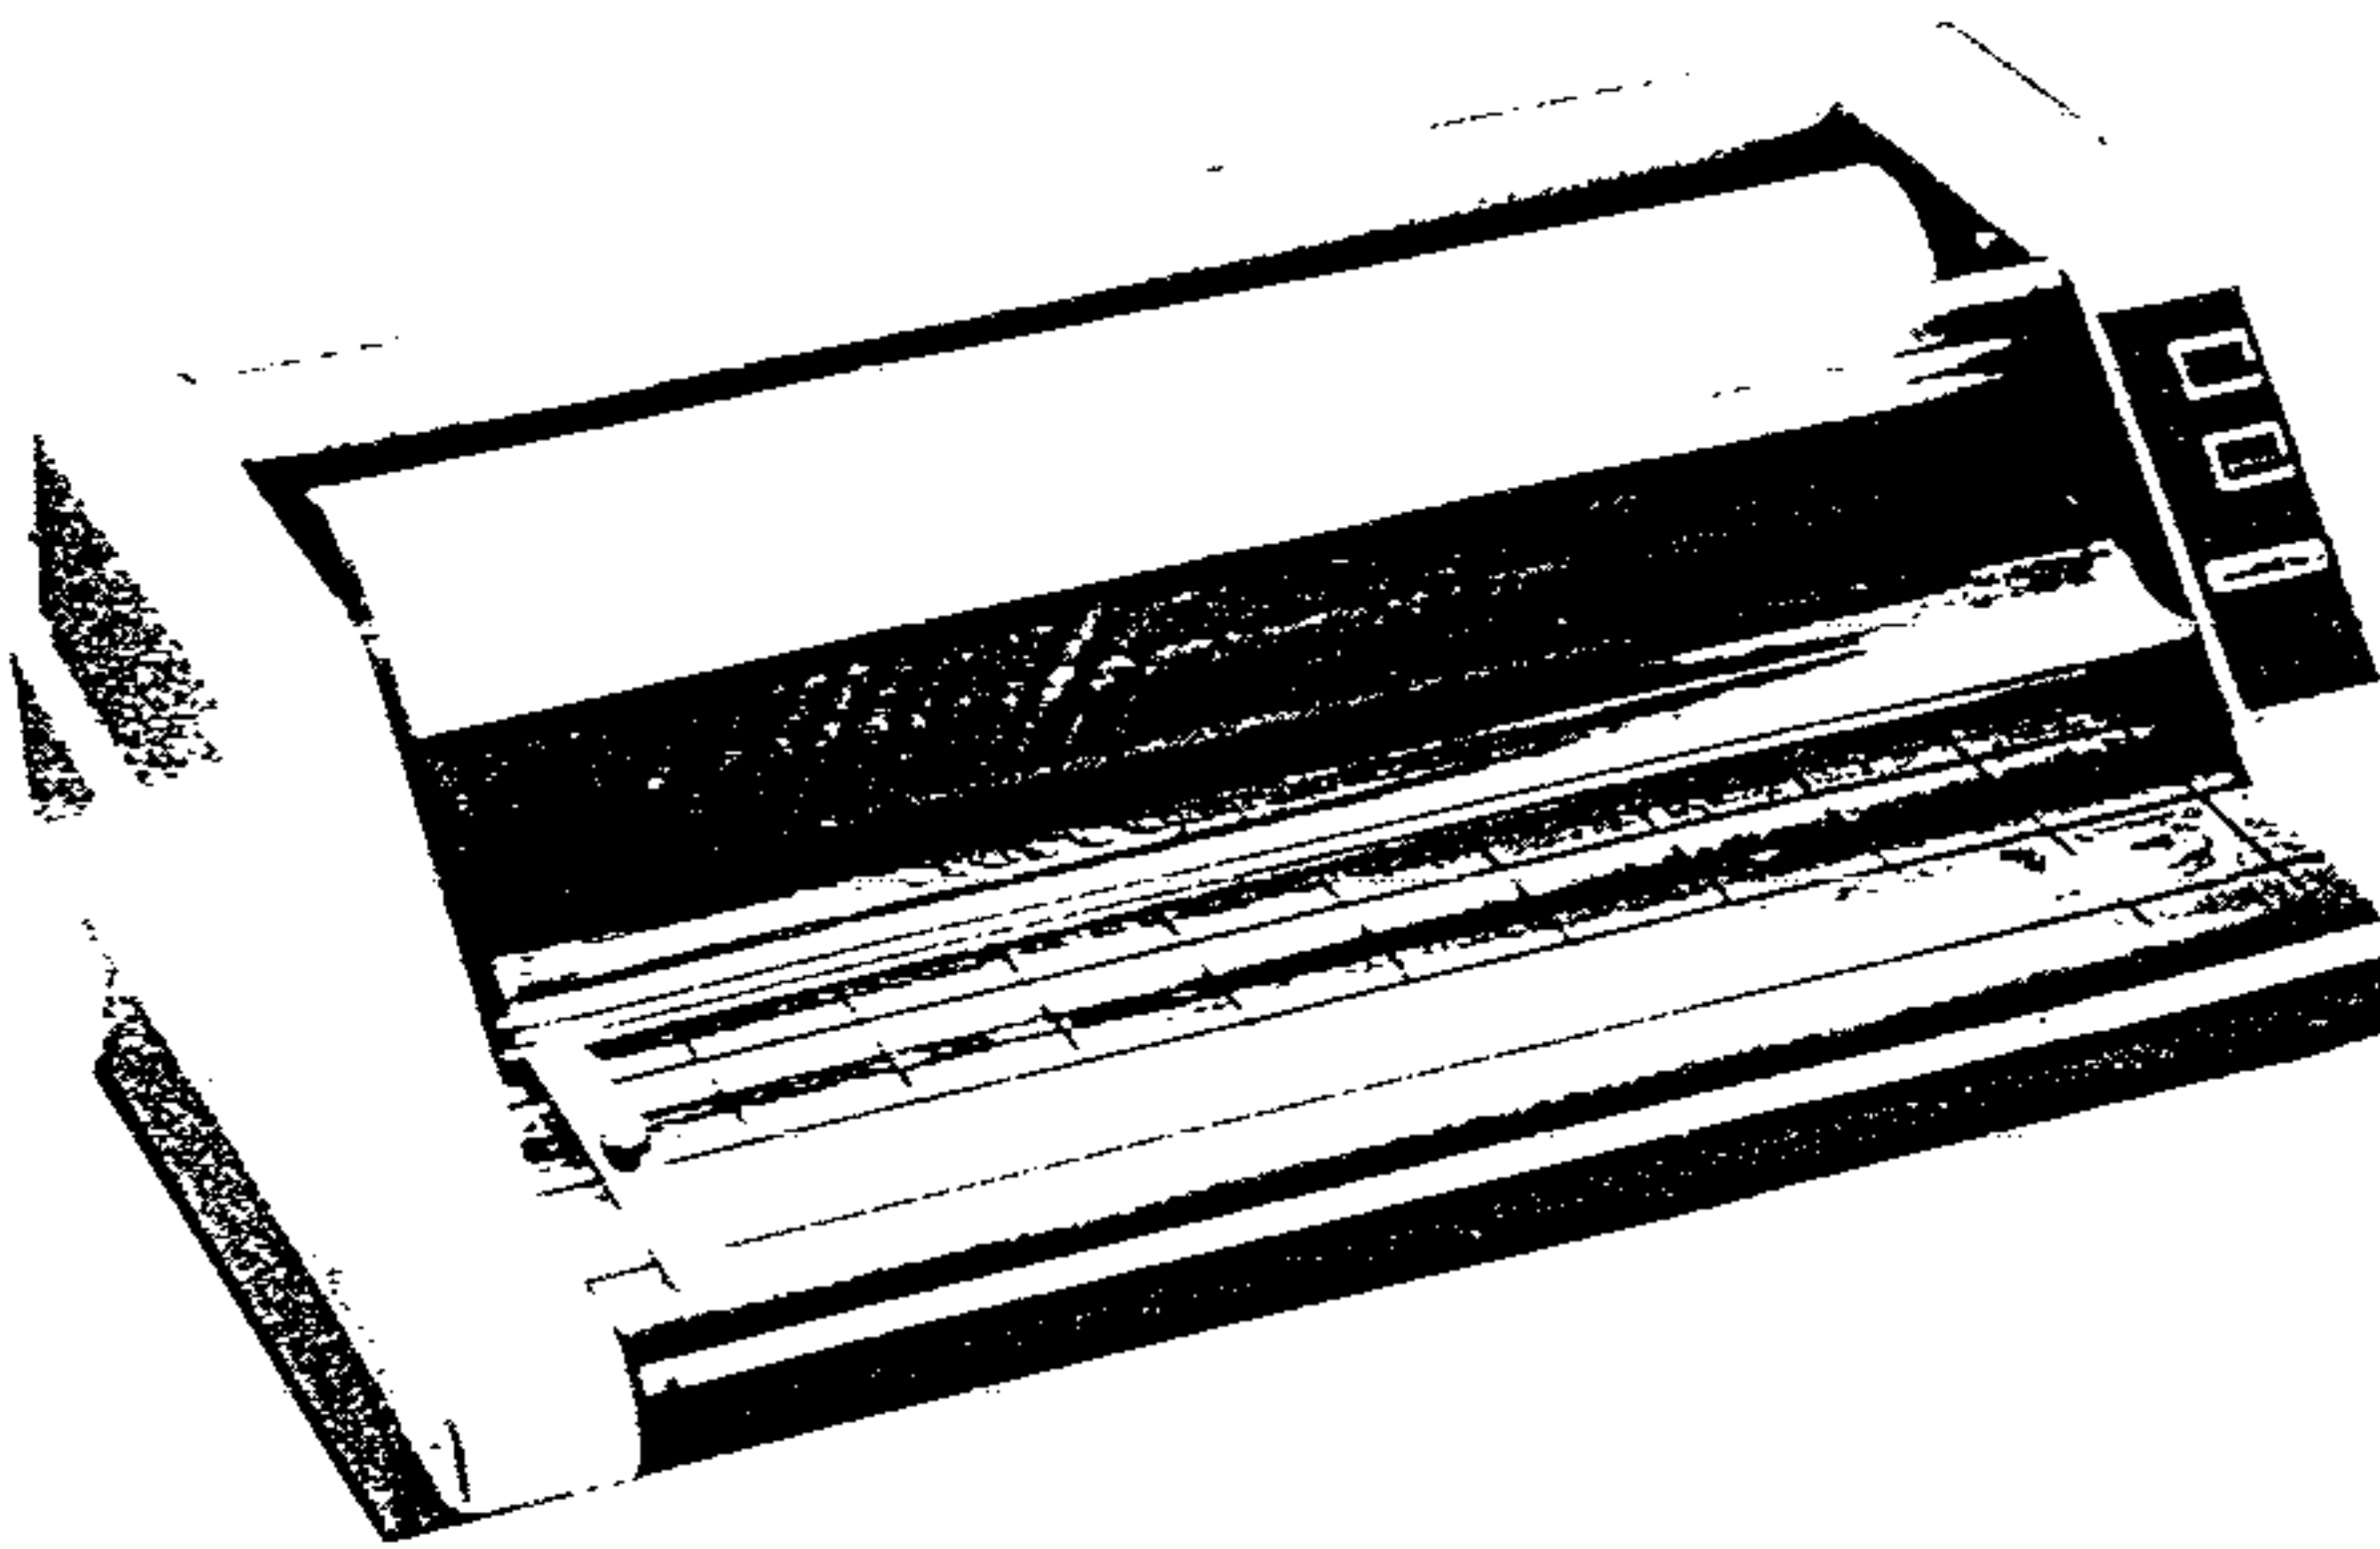

## Clearing a Film Jam (Wrap-Up)

The GBC4250 is designed to eliminate film wrapping around the black pull rollers. It may occur though, if the film is loaded improperly with the adhesive side contacting the rollers, or if the film exit path in the rear is blocked.


To clear a jam:

1. Immediately stop the laminator, and set the speed control at slow.
2. Depress the reverse switch while firmly pulling film out the rear of the laminator. Continue pulling the film until it unwinds completely from the

rollers. At this point you will feel a momentary lightening of tension, followed by a strong pull in the opposite direction.

3. Release the reverse switch, and run the laminator forward until all wrinkled film exits out the rear.

**NOTE:** If film is wrapped around the pull rollers and does not extend out the rear of the laminator remove the top film supply roll, and pull the film towards the front of the laminator while pushing in the reverse switch.

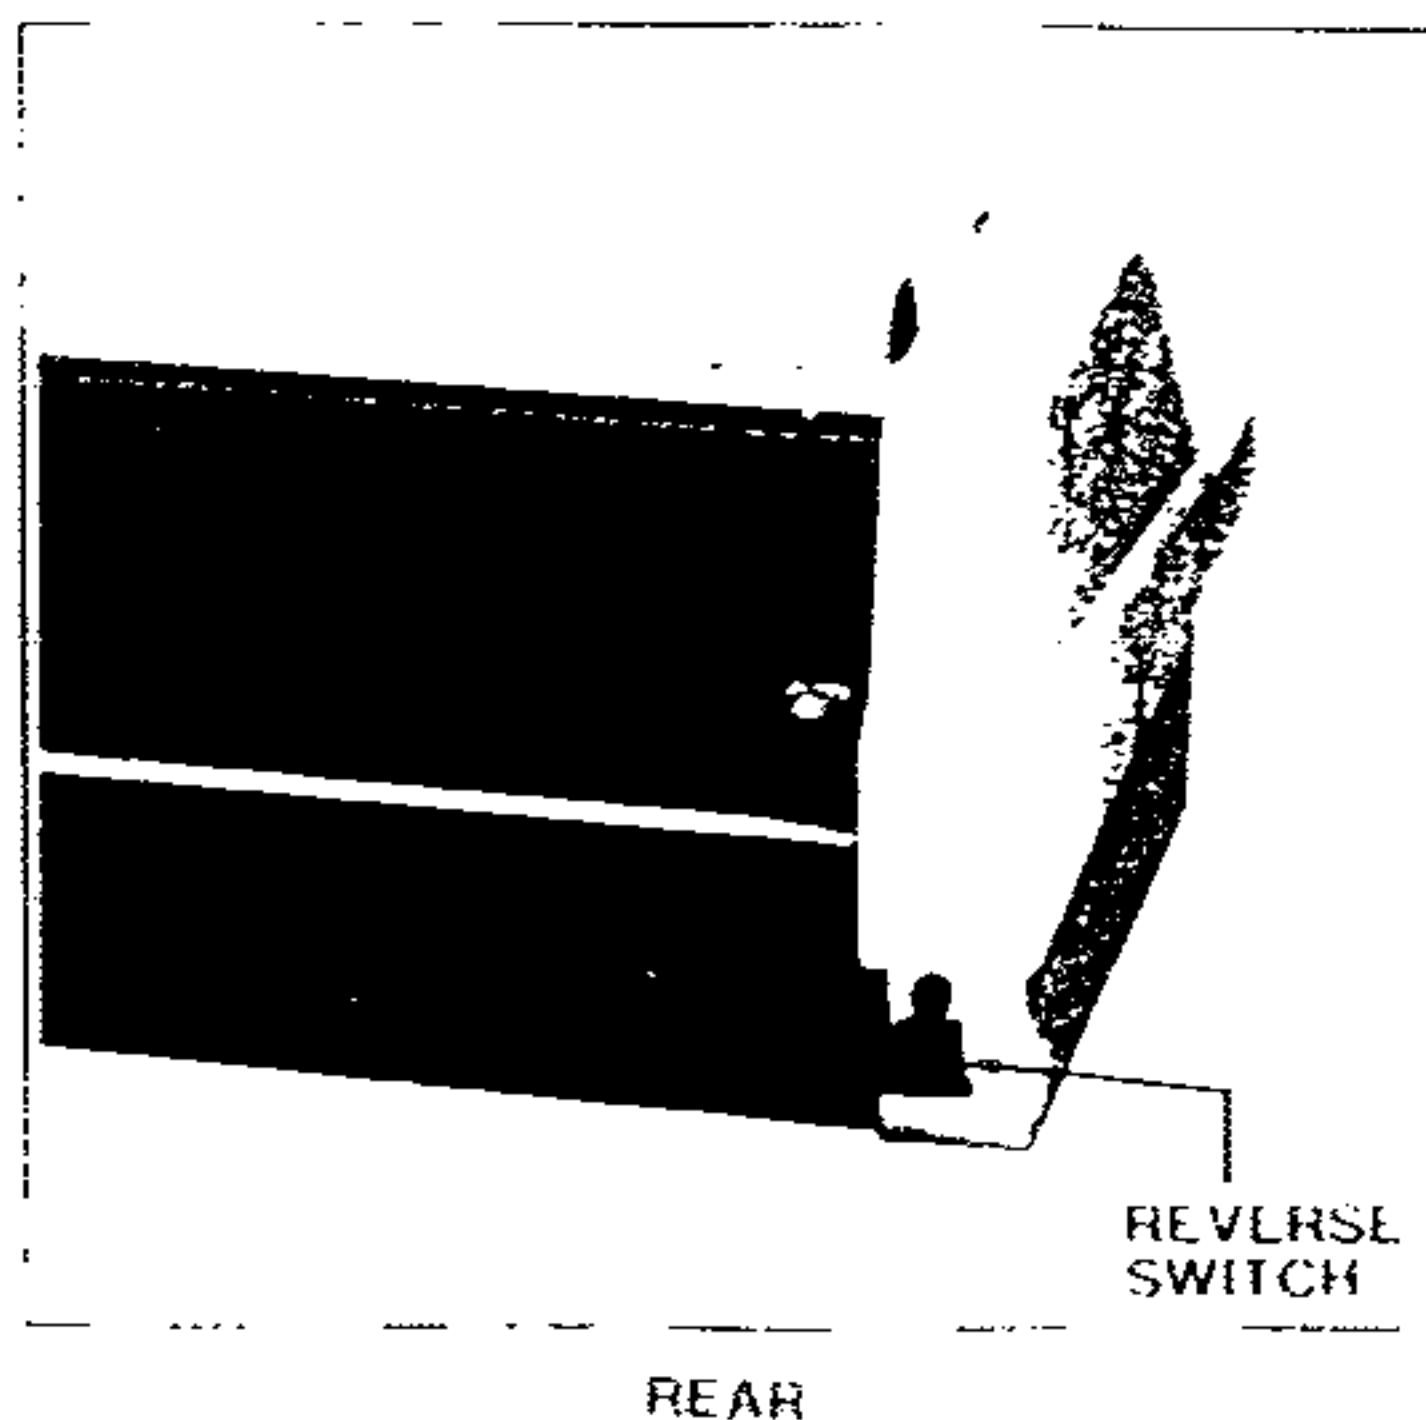

**REVERSE SWITCH:** Reverses the black pull rollers to help clear a film jam (wrap up) within the laminator. The GBC4250 is designed to eliminate film jams, but one may occur if the film is loaded improperly with the adhesive side contacting the rollers, or if the film exit path in the rear of the laminator is blocked.

**NOTE:** Rollers reverse only while the switch is depressed. Switch should only be operated at a slow speed with the "RUN/STOP" switch in the "STOP" position.



National Service Department